

# Feldklasse




## Spare parts list


Rukaby since year of construction 2021

DULKS ABRAH Beet since year of construction 2019

# 1. Serrated disks

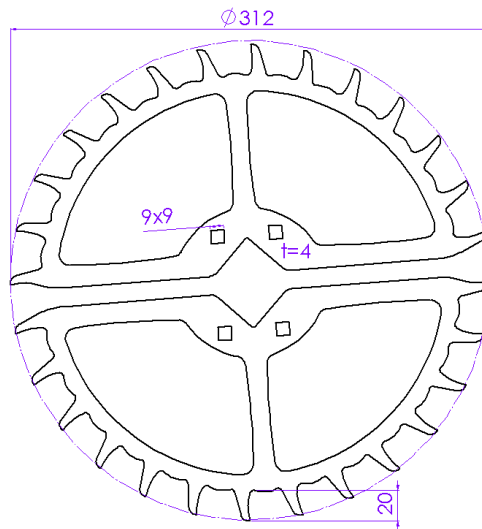


With clamp	ABB5M14
Without clamp	2x ABB5B24

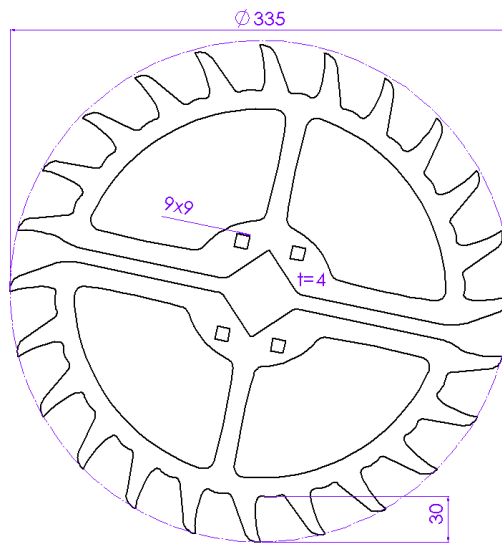


With clamp	ABB5M16
Without clamp	2x ABB5B25

## 2. Rotating blades


Left blade  
Rotates left beside  
the plant.

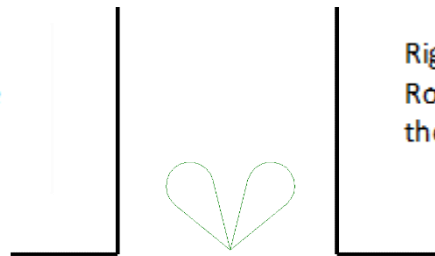


Right blade  
Rotates right beside  
the plant.

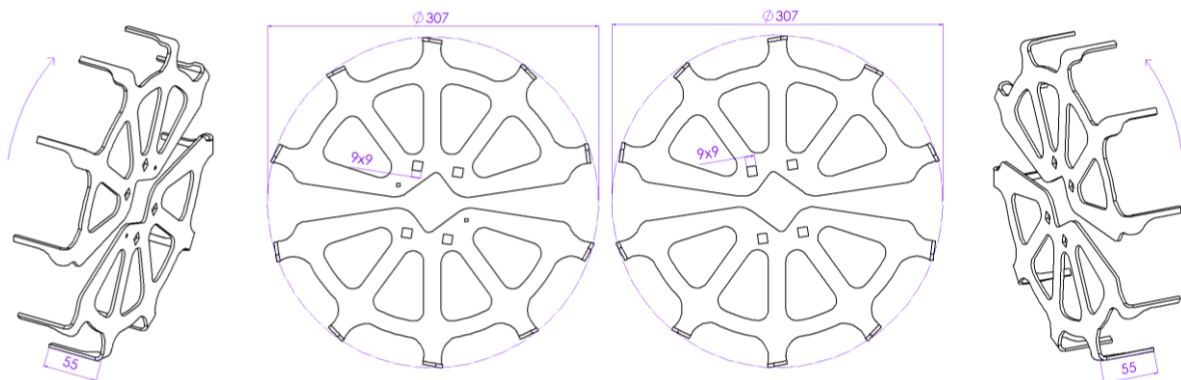


55 mm left		55 mm right
ABB5M19	With clamp	ABB5M18
2x ABB5B27	Without clamp	2x ABB5B26

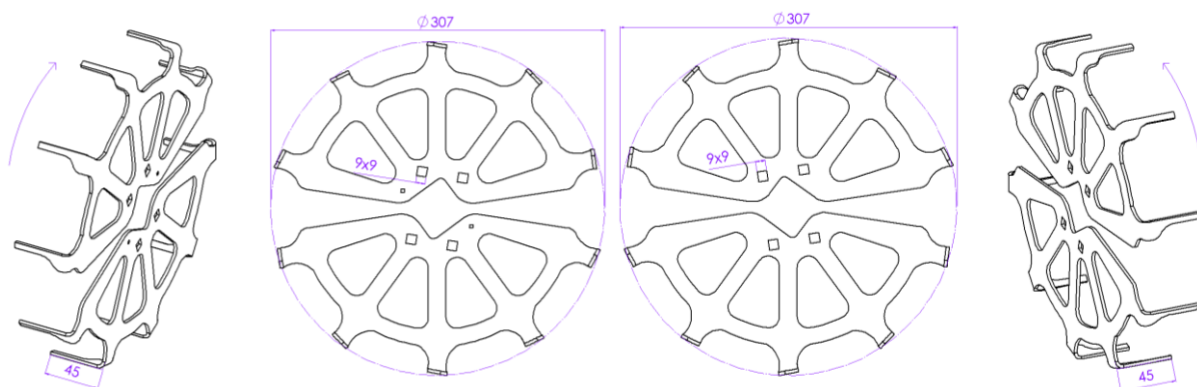

45 mm left		45 mm right
ABB5M21	With clamp	ABB5M20
2x ABB5B29	Without clamp	2x ABB5B28

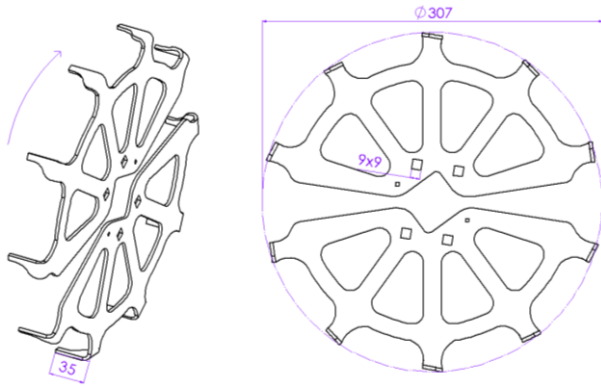


35 mm left		20 mm left
ABB5M22	With clamp	ABB5M23
2x ABB5B30	Without clamp	2x ABB5B31

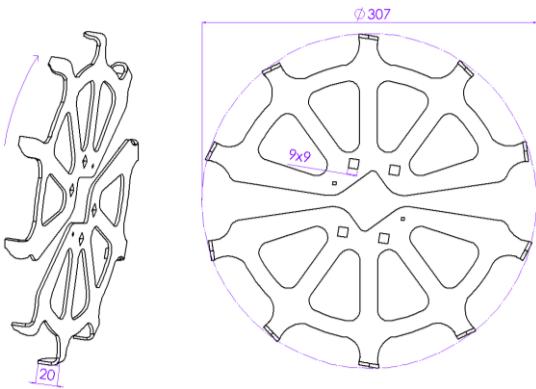

20 mm left	
ABB5M23	With clamp
2x ABB5B31	With clamp

### 3. Tool clamp

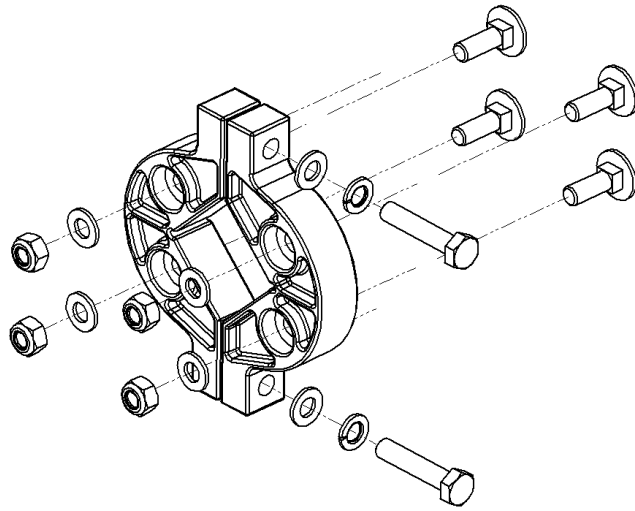

With truss-head screws	ABB5M24
Without truss-head screws	1x ABB5G02 1x ABB5G03



## Feldklasse GmbH

Rudolf-Diesel-Straße 12

40670 Meerbusch

Büro (Bestellung Ersatzteile): +49 (0)2159 821 87 01

Service (technische Fragen): +49 (0)172 614 34 06

[www.feldklasse.de](http://www.feldklasse.de)

[info@feldklasse.de](mailto:info@feldklasse.de)